

Fig. 3: Levering out air-conditioning system regulator
Courtesy of PORSCHE OF NORTH AMERICA, INC.

1. Insert a screwdriver behind the air-conditioning system regulator and press out.
2. Pull air-conditioning system regulator out of the installation slot.

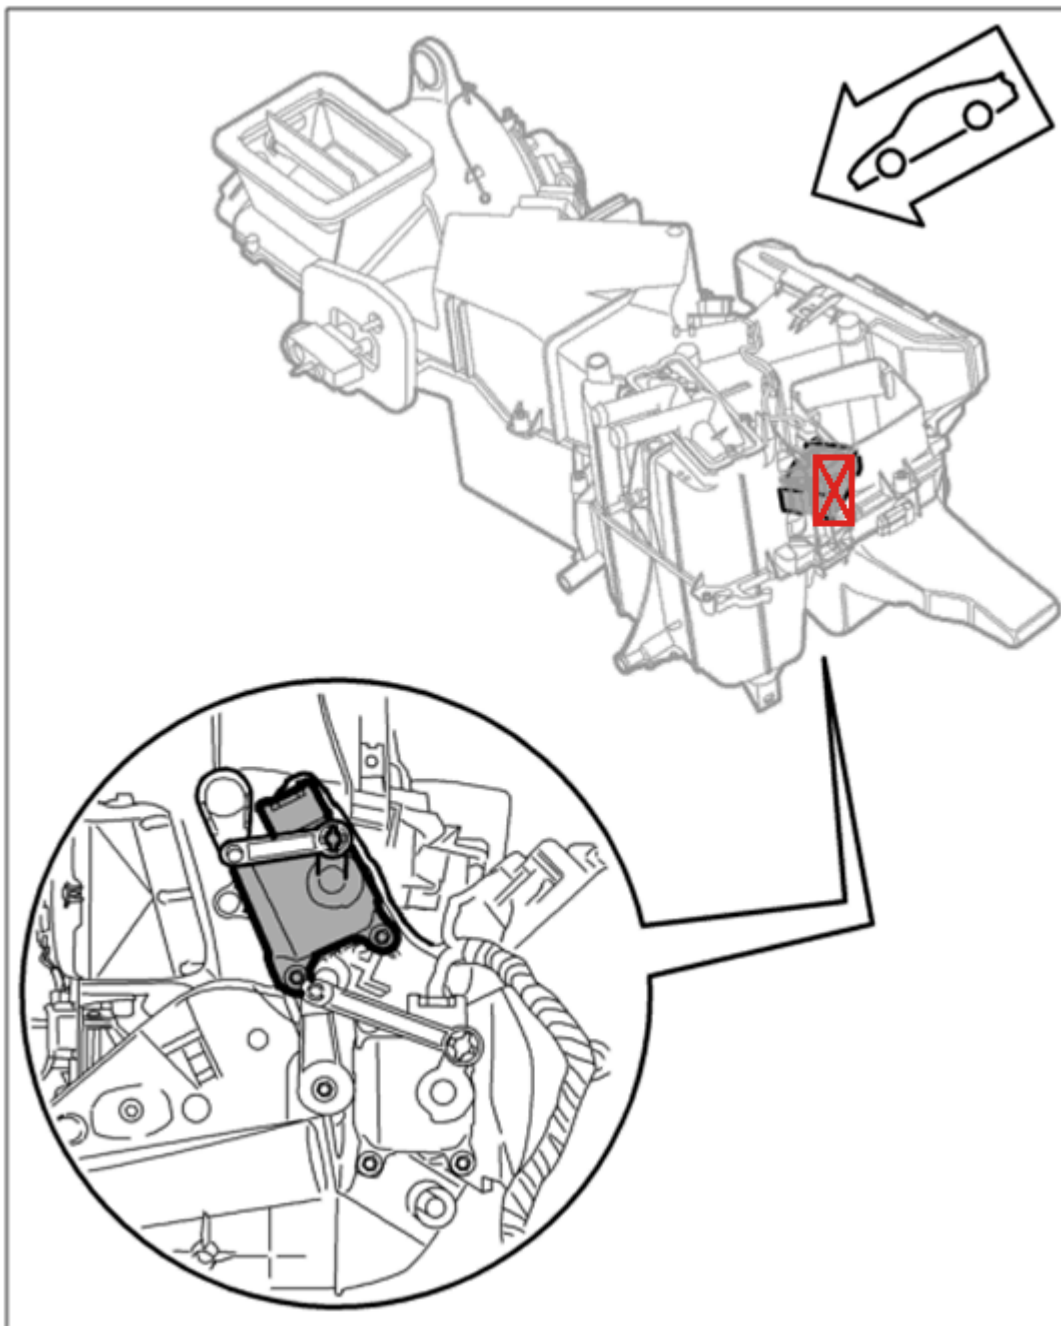


Fig. 14: Installation position

1. Switch off ignition and remove ignition key.

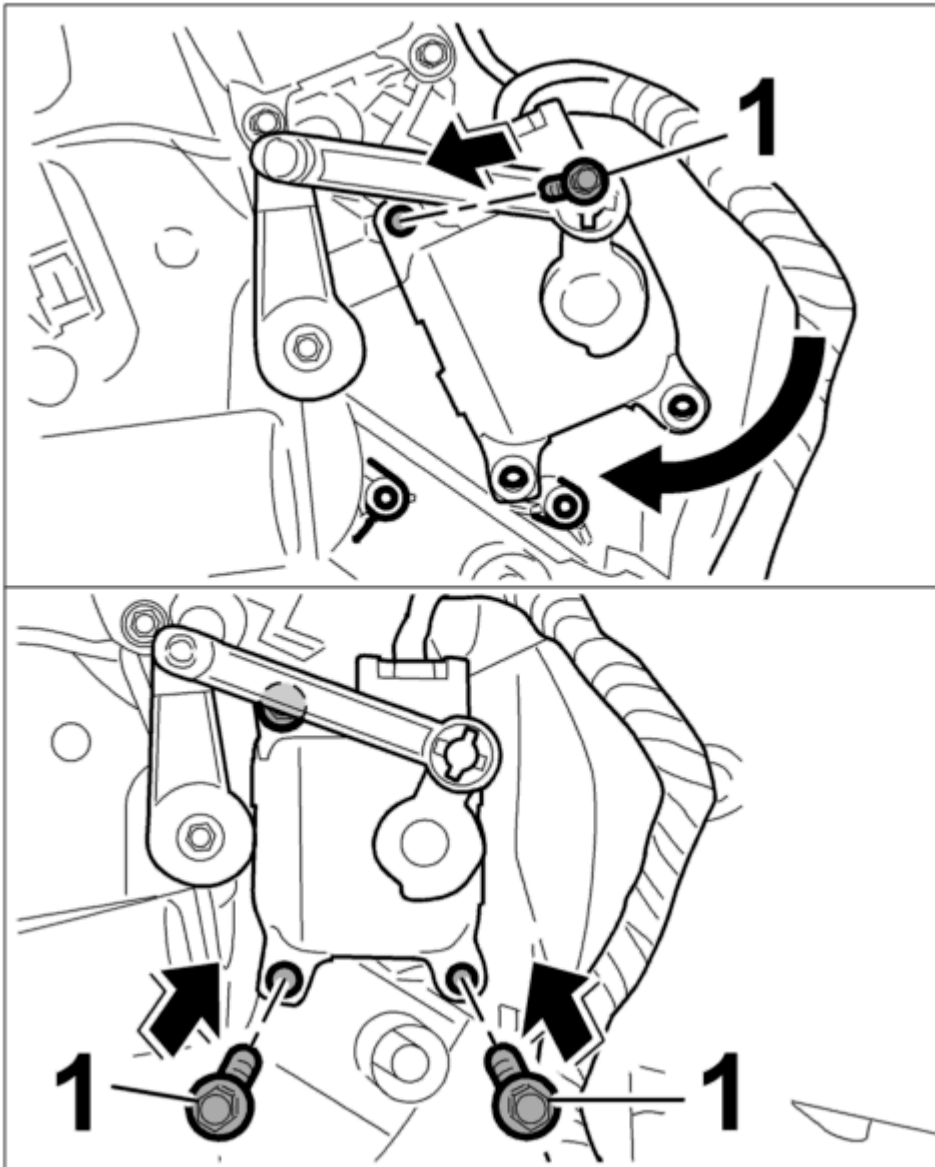


Fig. 20: Securing servo motor

Courtesy of PORSCHE OF NORTH AMERICA, INC.

3. Position servo motor on heater/air-conditioning unit and tighten with the three fastening screws -1- . -->
Tightening torque: 1.2 (1.0 ftlb.) Nm +/-0.5 (0.5 ftlb.) Nm . See Fig. 20.

3.1. First screw in one fastening screw.

3.2. Turn the servo motor and screw in the remaining two fastening screws.

4. Switch on ignition and check function of servo motor by adjusting the air conditioning control.

SUBSEQUENT WORK

Subsequent work - servo motor for temperature mixing valve

1. Install front footwell outlet vent. Refer to **80 55 19 Removing and installing front footwell outlet vent - as of MY 2005 (All Models)** .
2. Install left and right covers of console. Refer to **68 14 19 Removing and installing center console cover - as of MY 2005 (All Models)** .

87 20 19 REMOVING AND INSTALLING SERVO MOTOR FOR CENTRAL DISTRIBUTOR FLAP (GREEN) - AS OF MY 2005 (ALL MODELS)

PRELIMINARY WORK

Preliminary work - servo motor for central distributor flap

1. Remove left and right covers of console. Refer to **68 14 19 Removing and installing center console cover - as of MY 2005 (All Models)** .
2. Remove front footwell outlet vent. Refer to **80 55 19 Removing and installing front footwell outlet vent - as of MY 2005 (All Models)** .

REMOVING SERVO MOTOR FOR CENTRAL DISTRIBUTOR FLAP

Removing servo motor for central distributor flap

Installation Location:

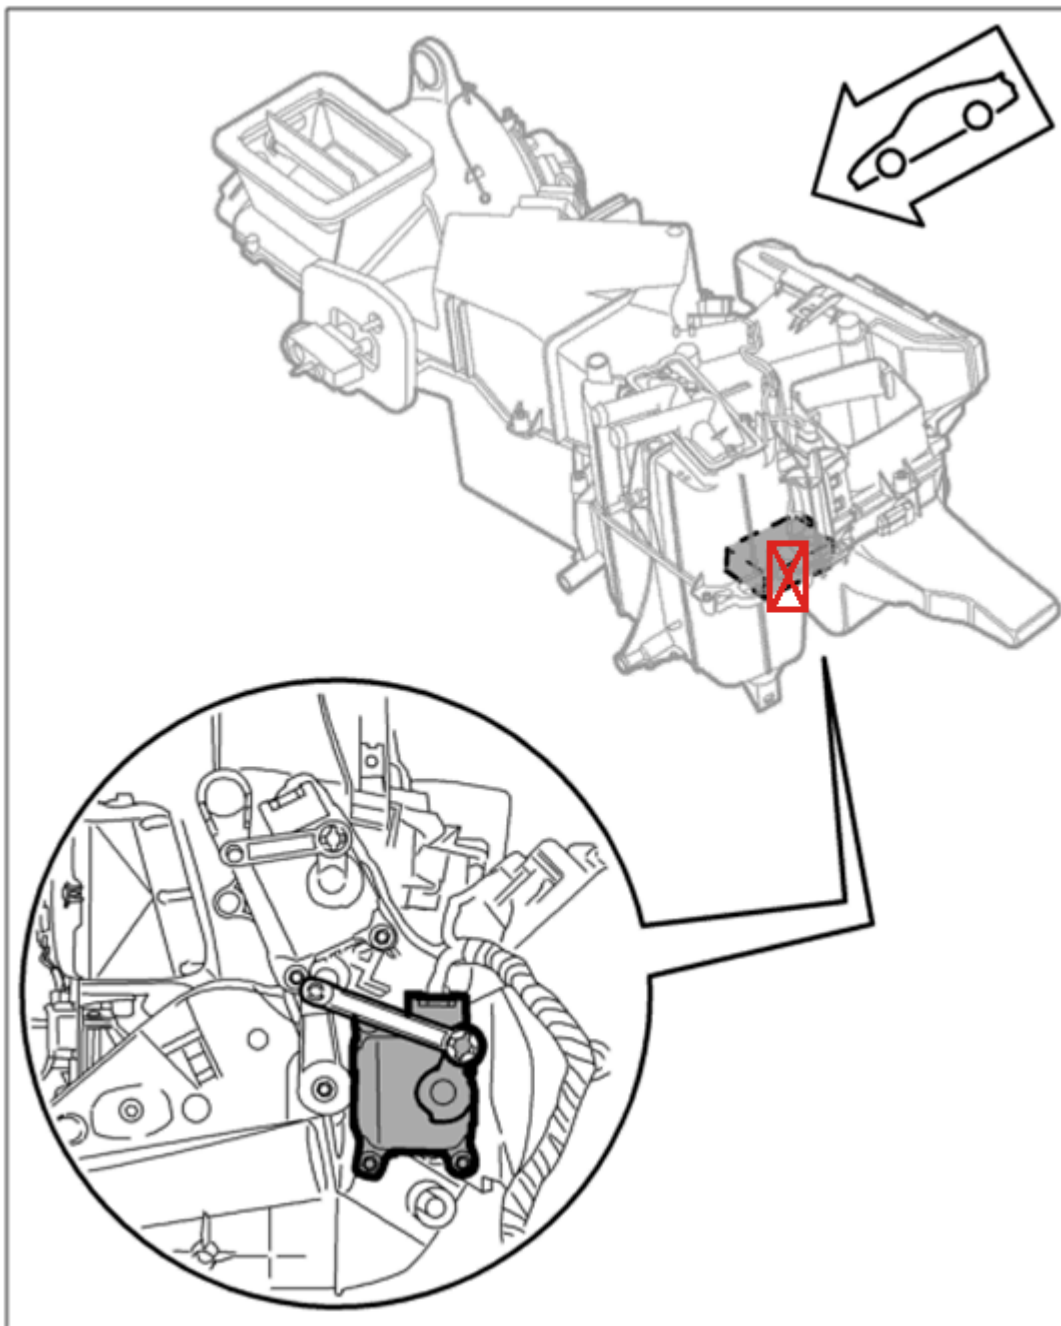


Fig. 21: Installation position

1. Switch off ignition and remove ignition key.